

THANK YOU FOR BUYING A WHIRLPOOL PRODUCT.

In order to receive a more complete assistance,
please register your appliance on
www.whirlpool.eu/register

Before using the appliance carefully read the Health and Safety guide.
Before using the machine, it is imperative that the transport bolts are removed. For more
detailed instructions on how to remove them, see the Installation Guide.

CONTROL PANEL

1. RAPID button

2. SCROLL UP / SCROLL DOWN buttons

3. ON/OFF button

4. WATER SAVE button and indicator light

5. START/PAUSE button

6. CONFIRM / KEY LOCK button

7. START DELAY button

8. SPIN button

9. TEMPERATURE button

10. CYCLE OPTION MENU / SETTINGS MENU button

11. STEAM HYGIENE button

12. WASH CYCLE SELECTOR KNOB
- 1

2

3

4

5

6

7

8

9

10

11

12

WASH CYCLE TABLE

Maximum load 8 kg Power input in o□ mode 0.5 W / in left-on mode 8 W					Detergents and Additives			Recommended detergent		Residual dampness % (***)	Energy consumption kWh	Total water l	Laundry temperature °C	
Wash cycle	Temperature		Max. spin speed (rpm)	Max. load (kg)	Duration (h : m)	Pre- wash	Wash	Fabric softener	Powder Liquid					
	Setting	Range												
Mixed Extra Silence	40°C	- 40°C	600	4,0	** –	□	–	□ □	–	□	– – – – □			
Mixed	40°C	- 40°C	1400	8,0	**	□ □	–	□ □	–	□	– – – – □			
Synthetics (3)	40°C	- 60°C	1200	4,5	2:45	□ □ □ □ □ □ □					35	0,540	74 43	
Cotton (2)	40°C	- 90°C	1400	8,0	3:10	□ □ □ □ □ □ □					49	0,874	68 45	
Delicates	30°C	- 30°C	0	1,0	** –	□	–	□ □	–	□	– – – – □			
20°C	20 °C	- 20 °C	1400	8,0	1:50	□ □	–	□ □	–	□	55	0,138	78 22	
Wool	30°C	- 30°C	600	2,0	** –	□	–	□ □	–	□	– – – – □			
Spin & Drain *	– –	1400	8,0	**	– – – – – – – – – –									
Rinse & Spin	– –	1400	8,0	**	– – – – –			□	– – – – –					
Anti Allergy	60°C	40°C - 60°C	1400	5,0	** –	□	–	□ □ □ □ □			– – – – –			
More Cycles														
• Shirts	40°C	- 40°C	600	2,0	** –	□	–	□ □	–	□	– – – – –			
• Jeans	40°C	- 40°C	800	3,0	** –	□	–	□ □	–	□	– – – – –			
• Bed & Bath	60°C	- 60°C	1400	8,0	** –	□	–	□ □ □ □ □			– – – – –			
• Duvet	30°C	- 30°C	1000	3,5	** –	□	–	□ □	–	□	– – – – –			
• Silk & Curtains	30°C	- 30°C	–	1,0	** –	□	–	□ □	–	□	– – – – –			
• Baby	40°C	- 40°C	800	4,0	** –	□	–	□ □	–	□	– – – – –			
• Cuddly Toys	30°C	- 30°C	–	1,0	** –	□	–	□	–	□ □	– – – – –			
• Pets Stu□	40°C	- 40°C	600	2,0	** –	□	–	□ □	–	□	– – – – –			
• Multi Color	20 °C	- 20 °C	1400	8,0	** –	□	–	□ □	–	□	– – – – –			
• Anti Stain	40°C	- 40°C	1400	8,0	** –	□	–	□ □ □ □ □			– – – – –			
			1351	8,0	3:35 –	□	–	□ □ □ □ □			53	0,720	60 30	
Eco 40-60 (1)	40 °C	40°C	1351	4,0	2:45 –	□	–	□ □ □ □ □			53	0,430	40 25	
			1351	2,0	1:55 –	□	–	□ □ □ □ □			53	0,230	35 20	
Full Load 45’	40°C	- 40°C	1200	8,0	**	□ □	–	□ □ □ □ □			– – – – –			
Rapid 30’	30°C	- 30°C	800	4,5	0:30 –	□	–	□ □	–	□	71	0,178	37 27	
Steam Refresh 20’	– – –	2,0	**	– – – – – – – – – –										

! Selecting “More cycles ” on the control dial gives you access to extra wash cycles shown in the table above.

The cycle duration indicated on the display or instruction manual is an estimate based on standard conditions. The actual duration may vary in relation to several factors, such as the temperature and pressure of the incoming water, ambient temperature, amount of detergent, load quantity and type, load balancing and any additional options selected.The values given for programmes other than the Eco 40-60 programme are indicative only.

1) Eco 40-60 - Test wash cycle in compliance with EU Ecodesign regulation 2019/2014. The most efficient programme in terms of energy and water consumption for washing normally soiled cotton laundry.
Note: spin speed values shown on the display can slightly differs from the values stated in the table.

For all testing institutes:

2) Long cotton cycle: set wash cycle “Cotton ” with a temperature of 40°C.

3) Long synthetics cycle: set wash cycle “Synthetics ” with a temperature of 40°C.

* By selecting the “Spin & Drain ” cycle and excluding the spin cycle, the washing machine will drain only.

** The duration of the wash cycles can be checked on the display.

***After programme end and spinning with maximum selectable spin speed, in default programme setting.

6th Sense - the sensor technology adapts water, energy and programme duration to your wash load.

