

INSTRUCTIONS FOR USE

- A. Lid handle
- B. Lock (if provided)
- C. Seal
- D. Defrost water drain plug (if present)
- E. Control panel
- F. Basket (if present)
- G. Condenser (located at the rear)

INSTALLATION

- Please refer to the chapter “BEFORE USING THE APPLIANCE”.
- Unpack the appliance.
- Remove the 4 protection pieces inserted between lid and appliance.

- Ensure that the defrosting water drainage plug (if provided) is correctly positioned (4).
- For best operation of the appliance and in order to avoid damage when the lid is opened, leave a space of at least 7 cm from the rear wall and 7 cm at the sides.
- Fit the accessories (if provided).
- Clean the inside of the appliance before using it.

1. Thermostat: it can be used to adjust the internal temperature of the appliance.
2. Red LED (if provided): Indicates that the appliance temperature is not sufficiently low.
3. Green LED (if provided): indicates that the appliance is on.
4. Yellow/orange illuminated button (if provided): activates/deactivates the fast freeze function.

IMPORTANT: when using the product as a cooler please check that the fast freeze function is not activated in order to avoid bottle cracking.

The exact configuration of the controls may vary according to the model.

Switching on the appliance

- The appliance is factory set for optimum freezer operation at a temperature of -18°C.
- Plug in the appliance.
- The green LED lights up (if provided).
- Also the red LED (if provided) will switch on because the temperature inside the appliance is not yet sufficiently low for food storage. The red LED will normally switch off within the first six hours after the appliance is switched on.
- After connecting the appliance to the mains supply and when the optimal temperature has been reached, ensure that the fast freeze button is not pressed (the yellow LED, if provided, is off).
- Place food inside the product only when the red LED (if provided) has switched off.

Note: As the seal is tight, the appliance lid cannot be reopened immediately after closing. Wait a few minutes before re-opening the lid of the appliance.

Temperature Adjustment

Use the thermostat to select the ideal storage temperature.

This product could be used both as freezer and as cooler.

- To use the product as freezer set thermostat in position “freezer”. In this case the product must be used to store frozen food, to freeze fresh food and to make ice. Internal temperature could be set between -14°C and -22°C (depending on the environmental conditions, this

